

Table 3: Details Menu

Menu Option	Description	Range
<b>Supply Air Temperature Setpoint</b>	Controls to this value if the Supply Air Temp Reset Strategy is set to True.	Adjustable: 40 to 70°F (4 to 21°C)
<b>Maximum Supply Temp Setpoint Adjust</b>	Shows the maximum adjustment of the Supply Air Setpoint plus or minus set value, when set to True.	Adjustable: 30 to 480 minutes
<b>Duct Pressure Setpoint</b>	Controls to this value if the Duct Static Setpoint reset strategy is set to True.	Adjustable: 0.5 to 4.5 in. w.c.
<b>Max Duct Static SP Adjust</b>	Shows the maximum adjustment of the duct pressure setpoint plus or minus set value, when set to True.	Adjustable: 0 to 0.5 in. w.c.
<b>Economizer Minimum Position Setpoint</b>	Sets the economizer's minimum position.	Adjustable: 0 to 100%

### Additional Information

Refer to the *Verasys System Operation Overview Technical Bulletin (LIT-12012370)* for more information on the various sequences performed by adjusting the control parameters.

For additional information about Verasys, use the QR code or visit [www.verasyscontrols.com](http://www.verasyscontrols.com).



**European Single Point of Contact:**

JOHNSON CONTROLS  
WESTENDHOF 3  
45143 ESSEN  
GERMANY

**NA/SA Single Point of Contact:**

JOHNSON CONTROLS  
507 E MICHIGAN ST  
MILWAUKEE WI 53202  
USA

**APAC Single Point of Contact:**

JOHNSON CONTROLS  
C/O CONTROLS PRODUCT MANAGEMENT  
NO. 22 BLOCK D NEW DISTRICT  
WUXI JIANGSU PROVINCE 214142  
CHINA





24-10143-1388, Rev. -

(barcode for factory use only)



# Zone Coordinator - VAV

## QUICK START GUIDE

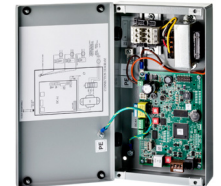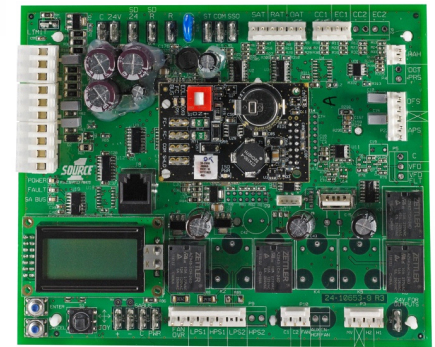

# GETTING STARTED

This guide provides the minimum configuration requirements you need to quickly bring the system communication and controls online with the Smart Building Hub (SBH).

## Unit Menu - VAV Systems

**Table 1: Unit Menu**

Menu Option	Description	Range
<b>Unit Enable</b>	Validates that the unit is set to Enable.	Adjustable: Shutdown, Enable
<b>Temporary Occupancy Timeout</b>	Displays lockout value. The default value is 120 minutes. You can adjust the temporary occupancy for all zones from this location.	Adjustable: 30 to 480 minutes

## Commissioning Menu

**Table 2: Commissioning Menu**

Menu Option	Description	Range
<b>Control Mode</b>	Validates that the unit is set to Auto.	Adjustable: Heat, Cool, Fan Only, Auto, Off
<b>Balancer Mode</b>	Enables Balancer Mode. When you are not using the Balancer Mode, ensure this parameter is set to Off.	Adjustable: On, Off

## Details Menu