

SEISKIT-LBB

Product Installation Document

PN 53854:A 8/18/2010 10-411

The instructions that follow describe requirements for seismic installations using the SEISKIT-LBB with an LBB backbox and Power Sonic batteries.

The SEISKIT-LBB hardware that accompanies this document must be used to secure the batteries to the backbox. It consists of a two-piece battery bracket and three nuts to secure the bracket over the batteries. When used in combination with the instructions in this document, the installation will meet the requirements of the following standards.

- ASCE 7 - American Society of Civil Engineers document
- IBC 2000 - referencing ASCE 7-98 and ICC AC-156
- IBC 2003 - referencing ASCE 7-02 and ICC AC-156
- IBC 2006 - referencing ASCE 7-05 and ICC AC-156
- IBC 2009 - referencing ASCE 7-05 and ICC AC-156
- CBC 2007 - referencing ASCE 7-05 and ICC AC-156

1. Cabinet Mounting

Specific hardware and installation procedures must be used when mounting the cabinet to conform with seismic rating requirements. Wood, concrete, and steel mounting requirements differ.

1.1 Mounting to Wood



NOTE: Wood lag screws must be embedded 2" (5 cm) minimum into wood. Sheetrock does not count as part of the 2" (5 cm) embedment. Install per the requirements of ICC ESR-2236.

- 1.If necessary, frame to match the backbox mounting holes.
- 2.Mark and pre-drill four holes for mounting bolts.
- 3.Place cabinet over the holes.
- 4.Install six 1/4" (.6 cm) wood lag screws, using six 1/4" (.6 cm) regular flat washers.

1.2 Mounting to Concrete



NOTE: Hilti Kwik Bolt 3 anchors must be embedded 2" (5 cm) into a concrete masonry wall (CMU), per the requirements of ICC ESR-1385.

- 1.Mark and pre-drill four holes for the mounting bolts.
- 2.Place cabinet over the holes. Install six 1/4" diameter Hilti Kwik Bolt 3 anchors, using six 1/4" (.6 cm) regular flat washers.

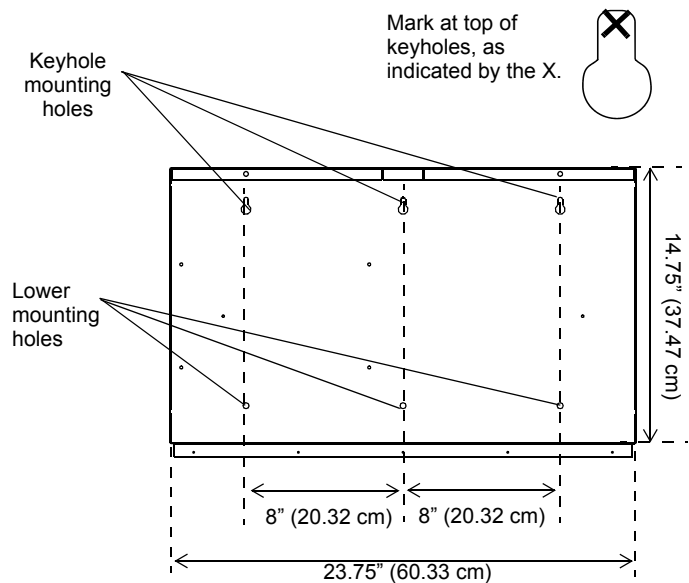


Figure 1 Backbox Mounting

1.3 Mounting to Steel Studs



- Use 1/4" Hilti Kwik-Pro self drilling screws per ICC ESR-2196.

1.4 U-Struts

- Use A1000 Series Unistrut with A1006-1420 through A1008-1420 (Channel Nut with Spring, 1-1/4" Series), which will accommodate the 1/4" (.6 cm) hardware.
- Span shall not be greater than width of unit + 12" (30.5 cm).
- Anchor into substrate per sections 1.1, 1.2 and 1.3.
- Install per manufacturer's instructions.

2. Battery Bracket Installation

1. Place batteries in cabinet.
2. Slide tab on bracket top into slot on bracket side.
3. Place bracket assembly over batteries, aligning over cabinet PEM studs. Refer to steps A through C below.
4. Attach bracket to cabinet PEM studs with three Keps #10-32 nuts, p/n 36048, included.

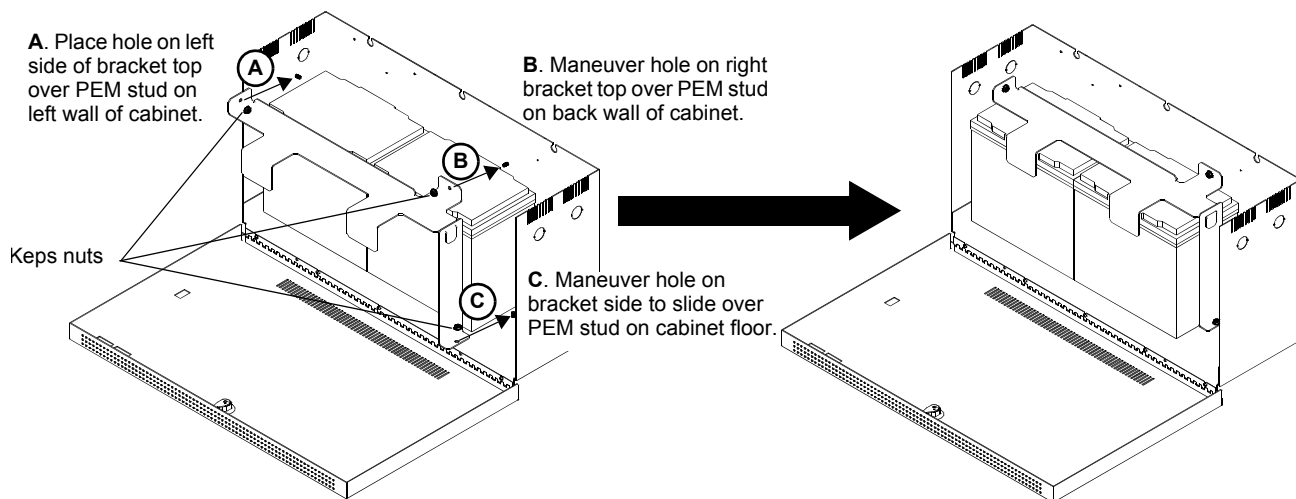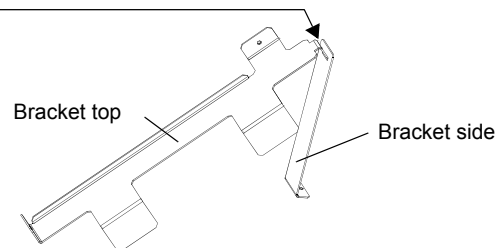

NOTE: Power Sonic batteries, p/n PS-12550, must be used in this installation. Substitutions are not acceptable.

Figure 2 Mounting the Battery Strap

3. Ceiling-mounted Devices

Ceiling-mounted devices, such as smoke detectors and notification appliances, should be mounted to the structure in accordance with any applicable codes or standards.